

Aero Design Ltd.**Work Order Control Sheet**Work Order#: 2017-214 Date Opened: 15 December 2017 Title: AssemblyAircraft OEM: Eurocopter Aircraft Model: AS350 Product Type: Cargo Basket Product Model: XL Ski Quantity: 1**Work Order Contents**

Work Order/Build Sheets (Procedures Provided)
 Additional Work Sheets (Standard Practice)
 Drawings (See List Below)
 Parts Distribution Sheet
 Sub Component Tags
 Completed Certification
 Time Sheet (R&D)
 Notes

Initial or N/A

CB/JC
N/A
CB/JC
CB/JC
N/A
JC
N/A
N/A

Component Completion

Quantity Complete on This Work Order
 Quantity Incomplete on This Work Order
 Further Processing Required Before Release
 Release to Stock as Components

As Instructed

1
N/A
N/A
N/A

Build Sheet Contents

Tasks Initialled
 Dual Inspections Initialled

Initial or N/A

CB/JR
CB/JR

Certification

Form One Completed
 Serviceable (Green) Tag Completed
 In Process (Yellow) Tag Completed
 Unserviceable (Red) Tag Completed
 Parts Placed in Stores for Distribution

Initial or N/A

JC
N/A
N/A
N/A
N/A

Drawing List

Drawing #	Rev #	Description	Initial or N/A
94010	1	Basket Assembly	CB/JR
70405	4	Lid Walkway Mod.	CB/JR
84240	0	Lid Brace Installation	CB/JR
84255	2	Handle Installation	CB/JR
94027	1	Placard	CB/JR
84261	2	Handle Assembly	CB/JR

Additional Documentation

Documentation of a minor change
 Non-Conformance Report Required
 Service Difficulty Report Required

Initial or N/A

N/A
N/A
N/A

Billing

Local (Aero Design)
 Research and Development
 Third Party

Initial or N/A

JC
N/A
N/A

Traveller

Install walkway on lid
 Install lid on basket body
 Re-tap mounting lug holes and install mount lugs
 Install handle brackets
 Install handle
 Install lid prop
 Install data plate

Initial or N/A

CB Off
CB Off
CB Off
CB Off
CB Off
CB Off
CB Off

Work performed by:

ICC / Dual Inspection performed by:

Work Order closed by:

Approved Manufacturing Facility 73-04

Print:

Print:

Print:

Sign:

Sign:

Sign:

SCA:

SCA:

SCA:

Date:

Date:

Date:

Form 20.D.03

Rev. Original 23 Sep 2014



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: Handle Bar Assy No. of pieces: 1

Manufacturer: Aero Design

Part No.: 84261-01 Serial/Batch No.: NSN

TTSN: N/P TSO: N/A Rem.: N/A

Work Order No.: 2017-194

Remaining Tasks to be Performed: To be installed

Signature: [Signature]

Date: Nov 21/2017 Lic. No. / SCA AD 73-04 05

Serviceable



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: AS350 XL Body No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 94011-01 Serial/Batch No.: NA

TTSN: NA TSO: NA Rem.: NA

Work Order No.: 2017-178-06

Remaining Tasks to be Performed: Clean up, Inspect,
powder coat.

Signature: David Marty

Date: Dec 12/2017 Lic. No. / SCA 7304

In Process



Aero Design Ltd.

9888 A Malaspina Rd. Powell River, BC, V8A 0G3

Phone: 604-483-2376 Fax: 604-483-2372 E-mail: info@aerodesign.ca

AMF 73-04

Nomenclature: AS350 XL Lid No. of pieces: 1

Manufacturer: Aero Design Ltd.

Part No.: 94012-01 Serial/Batch No.: NA

TISN: NA TSO: NA Rem.: NA

Work Order No.: 2017-178-04

Remaining Tasks to be Performed: Clean up, inspect,
powder coat.

Signature: *David Martz*

Date: Dec 11/2017 Lic. No. / SCA 7301

In Process



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:

1

PN:

MS20001P4-9600

Aircraft:

All

Model: All

Description:

Hinge

Supplier:

GKN Aerospace Bandy Machining


Color:

N/A



WO#:

N/A

PO# 17017


1. Approving Civil Aviation Authority/Country Transport Canada		2. AUTHORIZED RELEASE CERTIFICATE FORM ONE			3. Form Tracking No. 2017-0476		
4. Organization Name and Address AERO Design Ltd. – 9888A Malaspina Road, Powell River, BC, V8A 0G3					5. Work Order/Contract/Invoice WO 2017-214		
6. Item 1.	7. Description Cargo Basket	8. Part Number 94010-01	9. Qty. 1	10. Serial/Batch No. 94001-87	11. Status/Work New		
12. Remarks Modified with walkway on lid IAW DCL704; Black							
13a. Certifies that the items identified above were manufactured in conformity to: <input checked="" type="checkbox"/> Approved design data and are in condition for safe operation. <input type="checkbox"/> Non approved design data specified in block 12.			14a. <input type="checkbox"/> CAR 571.10 Maintenance Release <input type="checkbox"/> Other regulation specified in block 12 Certifies that unless otherwise specified in block 12, the work identified in block 11 and described in block 12, has been performed in compliance with the Canadian Aviation Regulations.				
13b. Signature  AD 73-04 02		13c. Approved Organization Number AMF 73-04		14b. Signature		14c. Approved Organization Number	
13d. Name Jeff Clarke - AD02		13e. Date (dd/mm/yyyy) 19 Dec 2017		14d. Name		14e. Date (dd/mm/yyyy)	
<p align="center">Installer Responsibilities</p> <p>This certificate does not constitute authority to install.</p> <p>Installers working in accordance with the national regulations of a country other than that specified in block 1 must ensure that their regulations recognize certifications from the country specified.</p> <p>Statements in blocks 13a or 14a do not constitute installation certification. In all cases, the technical record for the aircraft must contain an installation certification issued in accordance with the applicable national regulations before the aircraft may be flown.</p>							

REV	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; ADD ALTERNATE AVENUE; HARDWARE P/Ns UPDATED; CHANGE BRACE ASSEMBLY TO INSTALLATION	BAC	11/07

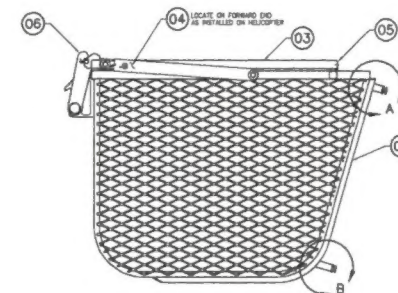


DETAIL A

SCALE 1 : 2
TYPICAL FRONT AND REAR



DETAIL B

SCALE 1 : 2
TYPICAL FRONT AND REAR

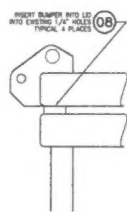

BUMPER INSTALLATION
SCALE 1 : 1



DETAIL C


SCALE 1 : 1
LOOKING AT PLACARD BRACKET

[illegible]

BASIC CODE REF. NAME CHARTER OF THE COMPANY TO BE EMPLOYED		DESIGN NO. OR NUMBER OF THE HEAD TOOL NAME OF THE TOOL DESIGN NO. FOR LENGTH OF THE TOOL TO BE EMPLOYED		APPROVALS DATE DESIGNER CHECKED UNLESS OTHER SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON DIMENSIONS X.000 ±0.010 X.000 ±0.005 X.000 ±0.002 X.000 ±0.001 X.000 ±0.0005 X.000 ±0.0002 X.000 ±0.0001		LAST OF THE MATERIALS AERO DESIGN LTD. 1000 KAPPA ROAD POKESVILLE, MD 21122 TEL. 410.440.2700 FAX 410.440.2701 WWW.AERODESIGN.COM	
BASIC CODES B1=MATERIAL B2=PROCESSING B3=FINISHING B4=ASSEMBLY B5=TESTING B6=INSPECTION B7=PACKAGING B8=SHIPPING B9=STORAGE B10=DISPOSAL B11=REPAIR B12=REWORK B13=REUSE B14=RECYCLE B15=REPAIR B16=REWORK B17=REUSE B18=RECYCLE B19=REPAIR B20=REWORK B21=REUSE B22=RECYCLE B23=REPAIR B24=REWORK B25=REUSE B26=RECYCLE B27=REPAIR B28=REWORK B29=REUSE B30=RECYCLE B31=REPAIR B32=REWORK B33=REUSE B34=RECYCLE B35=REPAIR B36=REWORK B37=REUSE B38=RECYCLE B39=REPAIR B40=REWORK B41=REUSE B42=RECYCLE B43=REPAIR B44=REWORK B45=REUSE B46=RECYCLE B47=REPAIR B48=REWORK B49=REUSE B50=RECYCLE B51=REPAIR B52=REWORK B53=REUSE B54=RECYCLE B55=REPAIR B56=REWORK B57=REUSE B58=RECYCLE B59=REPAIR B60=REWORK B61=REUSE B62=RECYCLE B63=REPAIR B64=REWORK B65=REUSE B66=RECYCLE B67=REPAIR B68=REWORK B69=REUSE B70=RECYCLE B71=REPAIR B72=REWORK B73=REUSE B74=RECYCLE B75=REPAIR B76=REWORK B77=REUSE B78=RECYCLE B79=REPAIR B80=REWORK B81=REUSE B82=RECYCLE B83=REPAIR B84=REWORK B85=REUSE B86=RECYCLE B87=REPAIR B88=REWORK B89=REUSE B90=RECYCLE B91=REPAIR B92=REWORK B93=REUSE B94=RECYCLE B95=REPAIR B96=REWORK B97=REUSE B98=RECYCLE B99=REPAIR B100=REWORK B101=REUSE B102=RECYCLE B103=REPAIR B104=REWORK B105=REUSE B106=RECYCLE B107=REPAIR B108=REWORK B109=REUSE B110=RECYCLE B111=REPAIR B112=REWORK B113=REUSE B114=RECYCLE B115=REPAIR B116=REWORK B117=REUSE B118=RECYCLE B119=REPAIR B120=REWORK B121=REUSE B122=RECYCLE B123=REPAIR B124=REWORK B125=REUSE B126=RECYCLE B127=REPAIR B128=REWORK B129=REUSE B130=RECYCLE B131=REPAIR B132=REWORK B133=REUSE B134=RECYCLE B135=REPAIR B136=REWORK B137=REUSE B138=RECYCLE B139=REPAIR B140=REWORK B141=REUSE B142=RECYCLE B143=REPAIR B144=REWORK B145=REUSE B146=RECYCLE B147=REPAIR B148=REWORK B149=REUSE B150=RECYCLE B151=REPAIR B152=REWORK B153=REUSE B154=RECYCLE B155=REPAIR B156=REWORK B157=REUSE B158=RECYCLE B159=REPAIR B160=REWORK B161=REUSE B162=RECYCLE B163=REPAIR B164=REWORK B165=REUSE B166=RECYCLE B167=REPAIR B168=REWORK B169=REUSE B170=RECYCLE B171=REPAIR B172=REWORK B173=REUSE B174=RECYCLE B175=REPAIR B176=REWORK B177=REUSE B178=RECYCLE B179=REPAIR B180=REWORK B181=REUSE B182=RECYCLE B183=REPAIR B184=REWORK B185=REUSE B186=RECYCLE B187=REPAIR B188=REWORK B189=REUSE B190=RECYCLE B191=REPAIR B192=REWORK B193=REUSE B194=RECYCLE B195=REPAIR B196=REWORK B197=REUSE B198=RECYCLE B199=REPAIR B200=REWORK B201=REUSE B202=RECYCLE B203=REPAIR B204=REWORK B205=REUSE B206=RECYCLE B207=REPAIR B208=REWORK B209=REUSE B210=RECYCLE B211=REPAIR B212=REWORK B213=REUSE B214=RECYCLE B215=REPAIR B216=REWORK B217=REUSE B218=RECYCLE B219=REPAIR B220=REWORK B221=REUSE B222=RECYCLE B223=REPAIR B224=REWORK B225=REUSE B226=RECYCLE B227=REPAIR B228=REWORK B229=REUSE B230=RECYCLE B231=REPAIR B232=REWORK B233=REUSE B234=RECYCLE B235=REPAIR B236=REWORK B237=REUSE B238=RECYCLE B239=REPAIR B240=REWORK B241=REUSE B242=RECYCLE B243=REPAIR B244=REWORK B245=REUSE B246=RECYCLE B247=REPAIR B248=REWORK B249=REUSE B250=RECYCLE B251=REPAIR B252=REWORK B253=REUSE B254=RECYCLE B255=REPAIR B256=REWORK B257=REUSE B258=RECYCLE B259=REPAIR B260=REWORK B261=REUSE B262=RECYCLE B263=REPAIR B264=REWORK B265=REUSE B266=RECYCLE B267=REPAIR B268=REWORK B269=REUSE B270=RECYCLE B271=REPAIR B272=REWORK B273=REUSE B274=RECYCLE B275=REPAIR B276=REWORK B277=REUSE B278=RECYCLE B279=REPAIR B280=REWORK B281=REUSE B282=RECYCLE B283=REPAIR B284=REWORK B285=REUSE B286=RECYCLE B287=REPAIR B288=REWORK B289=REUSE B290=RECYCLE B291=REPAIR B292=REWORK B293=REUSE B294=RECYCLE B295=REPAIR B296=REWORK B297=REUSE B298=RECYCLE B299=REPAIR B300=REWORK B301=REUSE B302=RECYCLE B303=REPAIR B304=REWORK B305=REUSE B306=RECYCLE B307=REPAIR B308=REWORK B309=REUSE B310=RECYCLE B311=REPAIR B312=REWORK B313=REUSE B314=RECYCLE B315=REPAIR B316=REWORK B317=REUSE B318=RECYCLE B319=REPAIR B320=REWORK B321=REUSE B322=RECYCLE B323=REPAIR B324=REWORK B325=REUSE B326=RECYCLE B327=REPAIR B328=REWORK B329=REUSE B330=RECYCLE B331=REPAIR B332=REWORK B333=REUSE B334=RECYCLE B335=REPAIR B336=REWORK B337=REUSE B338=RECYCLE B339=REPAIR B340=REWORK B341=REUSE B342=RECYCLE B343=REPAIR B344=REWORK B345=REUSE B346=RECYCLE B347=REPAIR B348=REWORK B349=REUSE B350=RECYCLE B351=REPAIR B352=REWORK B353=REUSE B354=RECYCLE B355=REPAIR B356=REWORK B357=REUSE B358=RECYCLE B359=REPAIR B360=REWORK B361=REUSE B362=RECYCLE B363=REPAIR B364=REWORK B365=REUSE B366=RECYCLE B367=REPAIR B368=REWORK B369=REUSE B370=RECYCLE B371=REPAIR B372=REWORK B373=REUSE B374=RECYCLE B375=REPAIR B376=REWORK B377=REUSE B378=RECYCLE B379=REPAIR B380=REWORK B381=REUSE B382=RECYCLE B383=REPAIR B384=REWORK B385=REUSE B386=RECYCLE B387=REPAIR B388=REWORK B389=REUSE B390=RECYCLE B391=REPAIR B392=REWORK B393=REUSE B394=RECYCLE B395=REPAIR B396=REWORK B397=REUSE B398=RECYCLE B399=REPAIR B400=REWORK B401=REUSE B402=RECYCLE B403=REPAIR B404=REWORK B405=REUSE B406=RECYCLE B407=REPAIR B408=REWORK B409=REUSE B410=RECYCLE B411=REPAIR B412=REWORK B413=REUSE B414=RECYCLE B415=REPAIR B416=REWORK B417=REUSE B418=RECYCLE B419=REPAIR B420=REWORK B421=REUSE B422=RECYCLE B423=REPAIR B424=REWORK B425=REUSE B426=RECYCLE B427=REPAIR B428=REWORK B429=REUSE B430=RECYCLE B431=REPAIR B432=REWORK B433=REUSE B434=RECYCLE B435=REPAIR B436=REWORK B437=REUSE B438=RECYCLE B439=REPAIR B440=REWORK B441=REUSE B442=RECYCLE B443=REPAIR B444=REWORK B445=REUSE B446=RECYCLE B447=REPAIR B448=REWORK B449=REUSE B450=RECYCLE B451=REPAIR B452=REWORK B453=REUSE B454=RECYCLE B455=REPAIR B456=REWORK B457=REUSE B458=RECYCLE B459=REPAIR B460=REWORK B461=REUSE B462=RECYCLE B463=REPAIR B464=REWORK B465=REUSE B466=RECYCLE B467=REPAIR B468=REWORK B469=REUSE B470=RECYCLE B471=REPAIR B472=REWORK B473=REUSE B474=RECYCLE B475=REPAIR B476=REWORK B477=REUSE B478=RECYCLE B479=REPAIR B480=REWORK B481=REUSE B482=RECYCLE B483=REPAIR B484=REWORK B485=REUSE B486=RECYCLE B487=REPAIR B488=REWORK B489=REUSE B490=RECYCLE B491=REPAIR B492=REWORK B493=REUSE B494=RECYCLE B495=REPAIR B496=REWORK B497=REUSE B498=RECYCLE B499=REPAIR B500=REWORK B501=REUSE B502=RECYCLE B503=REPAIR B504=REWORK B505=REUSE B506=RECYCLE B507=REPAIR B508=REWORK B509=REUSE B510=RECYCLE B511=REPAIR B512=REWORK B513=REUSE B514=RECYCLE B515=REPAIR B516=REWORK B517=REUSE B518=RECYCLE B519=REPAIR B520=REWORK B521=REUSE B522=RECYCLE B523=REPAIR B524=REWORK B525=REUSE B526=RECYCLE B527=REPAIR B528=REWORK B529=REUSE B530=RECYCLE B531=REPAIR B532=REWORK B533=REUSE B534=RECYCLE B535=REPAIR B536=REWORK B537=REUSE B538=RECYCLE B539=REPAIR B540=REWORK B541=REUSE B542=RECYCLE B543=REPAIR B544=REWORK B545=REUSE B546=RECYCLE B547=REPAIR B548=REWORK B549=REUSE B550=RECYCLE B551=REPAIR B552=REWORK B553=REUSE B554=RECYCLE B555=REPAIR B556=REWORK B557=REUSE B558=RECYCLE B559=REPAIR B560=REWORK B561=REUSE B562=RECYCLE B563=REPAIR B564=REWORK B565=REUSE B566=RECYCLE B567=REPAIR B568=REWORK B569=REUSE B570=RECYCLE B571=REPAIR B572=REWORK B573=REUSE B574=RECYCLE B575=REPAIR B576=REWORK B577=REUSE B578=RECYCLE B579=REPAIR B580=REWORK B581=REUSE B582=RECYCLE B583=REPAIR B584=REWORK B585=REUSE B586=RECYCLE B587=REPAIR B588=REWORK B589=REUSE B590=RECYCLE B591=REPAIR B592=REWORK B593=REUSE B594=RECYCLE B595=REPAIR B596=REWORK B597=REUSE B598=RECYCLE B599=REPAIR B600=REWORK B601=REUSE B602=RECYCLE B603=REPAIR B604=REWORK B605=REUSE B606=RECYCLE B607=REPAIR B608=REWORK B609=REUSE B610=RECYCLE B611=REPAIR B612=REWORK B613=REUSE B614=RECYCLE B615=REPAIR B616=REWORK B617=REUSE B618=RECYCLE B619=REPAIR B620=REWORK B621=REUSE B622=RECYCLE B623=REPAIR B624=REWORK B625=REUSE B626=RECYCLE B627=REPAIR B628=REWORK B629=REUSE B630=RECYCLE B631=REPAIR B632=REWORK B633=REUSE B634=RECYCLE B635=REPAIR B636=REWORK B637=REUSE B638=RECYCLE B639=REPAIR B640=REWORK B641=REUSE B642=RECYCLE B643=REPAIR B644=REWORK B645=REUSE B646=RECYCLE B647=REPAIR B648=REWORK B649=REUSE B650=RECYCLE B651=REPAIR B652=REWORK B653=REUSE B654=RECYCLE B655=REPAIR B656=REWORK B657=REUSE B658=RECYCLE B659=REPAIR B660=REWORK B661=REUSE B662=RECYCLE B663=REPAIR B664=REWORK B665=REUSE B666=RECYCLE B667=REPAIR B668=REWORK B669=REUSE B670=RECYCLE B671=REPAIR B672=REWORK B673=REUSE B674=RECYCLE B675=REPAIR B676=REWORK B677=REUSE B678=RECYCLE B679=REPAIR B680=REWORK B681=REUSE B682=RECYCLE B683=REPAIR B684=REWORK B685=REUSE B686=RECYCLE B687=REPAIR B688=REWORK B689=REUSE B690=RECYCLE B691=REPAIR B692=REWORK B693=REUSE B694=RECYCLE B695=REPAIR B696=REWORK B697=REUSE B698=RECYCLE B699=REPAIR B700=REWORK B701=REUSE B702=RECYCLE B703=REPAIR B704=REWORK B705=REUSE B706=RECYCLE B707=REPAIR B708=REWORK B709=REUSE B710=RECYCLE B711=REPAIR B712=REWORK B713=REUSE B714=RECYCLE B715=REPAIR B716=REWORK B717=REUSE B718=RECYCLE B719=REPAIR B720=REWORK B721=REUSE B722=RECYCLE B723=REPAIR B724=REWORK B725=REUSE B726=RECYCLE B727=REPAIR B728=REWORK B729=REUSE B730=RECYCLE B731=REPAIR B732=REWORK B733=REUSE B734=RECYCLE B735=REPAIR B736=REWORK B737=REUSE B738=RECYCLE B739=REPAIR B740=REWORK B741=REUSE B742=RECYCLE B743=REPAIR B744=REWORK B745=REUSE B746=RECYCLE B747=REPAIR B748=REWORK B749=REUSE B750=RECYCLE B751=REPAIR B752=REWORK B753=REUSE B754=RECYCLE B755=REPAIR B756=REWORK B757=REUSE B758=RECYCLE B759=REPAIR B760=REWORK B761=REUSE B762=RECYCLE B763=REPAIR B764=REWORK B765=REUSE B766=RECYCLE B767=REPAIR B768=REWORK B769=REUSE B770=RECYCLE B771=REPAIR B772=REWORK B773=REUSE B774=RECYCLE B775=REPAIR B776=REWORK B777=REUSE B778=RECYCLE B779=REPAIR B780=REWORK B781=REUSE B782=RECYCLE B783=REPAIR B784=REWORK B785=REUSE B786=RECYCLE B787=REPAIR B788=REWORK B789=REUSE B790=RECYCLE B791=REPAIR B792=REWORK B793=REUSE B794=RECYCLE B795=REPAIR B796=REWORK B797=REUSE B798=RECYCLE B799=REPAIR B800=REWORK B801=REUSE B802=RECYCLE B803=REPAIR B804=REWORK B805=REUSE B806=RECYCLE B807=REPAIR B808=REWORK B809=REUSE B810=RECYCLE B811=REPAIR B812=REWORK B813=REUSE B814=RECYCLE B815=REPAIR B816=REWORK B817=REUSE B818=RECYCLE B819=REPAIR B820=REWORK B821=REUSE B822=RECYCLE B823=REPAIR B824=REWORK B825=REUSE B826=RECYCLE B827=REPAIR B828=REWORK B829=REUSE B830=RECYCLE B831=REPAIR B832=REWORK B833=REUSE B834=RECYCLE B835=REPAIR B836=REWORK B837=REUSE B838=RECYCLE B839=REPAIR B840=REWORK B841=REUSE B842=RECYCLE B843=REPAIR B844=REWORK B845=REUSE B846=RECYCLE B847=REPAIR B848=REWORK B849=REUSE B850=RECYCLE B851=REPAIR B852=REWORK B853=REUSE B854=RECYCLE B855=REPAIR B856=REWORK B857=REUSE B858=RECYCLE B859=REPAIR B860=REWORK B861=REUSE B862=RECYCLE B863=REPAIR B864=REWORK B865=REUSE B866=RECYCLE B867=REPAIR B868=REWORK B869=REUSE B870=RECYCLE B871=REPAIR B872=REWORK B873=REUSE B874=RECYCLE B875=REPAIR B876=REWORK B877=REUSE B878=RECYCLE B879=REPAIR B880=REWORK B881=REUSE B882=RECYCLE B883=REPAIR B884=REWORK B885=REUSE B886=RECYCLE B887=REPAIR B888=REWORK B889=REUSE B890=RECYCLE B891=REPAIR B892=REWORK B893=REUSE B894=RECYCLE B895=REPAIR B896=REWORK B897=REUSE B898=RECYCLE B899=REPAIR B900=REWORK B901=REUSE B902=RECYCLE B903=REPAIR B904=REWORK B905=REUSE B906=RECYCLE B907=REPAIR B908=REWORK B909=REUSE B910=RECYCLE B911=REPAIR B912=REWORK B913=REUSE B914=RECYCLE B915=REPAIR B916=REWORK B917=REUSE B918=RECYCLE B919=REPAIR B920=REWORK B921=REUSE B922=RECYCLE B923=REPAIR B924=REWORK B925=REUSE B926=RECYCLE B927=REPAIR B928=REWORK B929=REUSE B930=RECYCLE B931=REPAIR B932=REWORK B933=REUSE B934=RECYCLE B935=REPAIR B936=REWORK B937=REUSE B938=RECYCLE B939=REPAIR B940=REWORK B941=REUSE B942=RECYCLE B943=REPAIR B944=REWORK B945=REUSE B946=RECYCLE B947=REPAIR B948=REWORK B949=REUSE B950=RECYCLE B951=REPAIR B952=REWORK B953=REUSE B954=RECYCLE B955=REPAIR B956=REWORK B957=REUSE B958=RECYCLE B959=REPAIR B960=REWORK B961=REUSE B962=RECYCLE B963=REPAIR B964=REWORK B965=REUSE B966=RECYCLE B967=REPAIR B968=REWORK B969=REUSE B970=RECYCLE B971=REPAIR B972=REWORK B973=REUSE B974=RECYCLE B975=REPAIR B976=REWORK B977=REUSE B978=RECYCLE B979=REPAIR B980=REWORK B981=REUSE B982=RECYCLE B983=REPAIR B984=REWORK B985=REUSE B986=RECYCLE B987=REPAIR B988=REWORK B989=REUSE B990=RECYCLE B991=REPAIR B992=REWORK B993=REUSE B994=RECYCLE B995=REPAIR B996=REWORK B997=REUSE B998=RECYCLE B999=REPAIR B1000=REWORK							

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	HANDLE END BRACKETS FLIPPED	BJC	SEPT 19/11
2	TITLE BLOCK UPDATED; LEVER ASSEMBLY ASSIGNED P/N	BJC	MAR 13/14

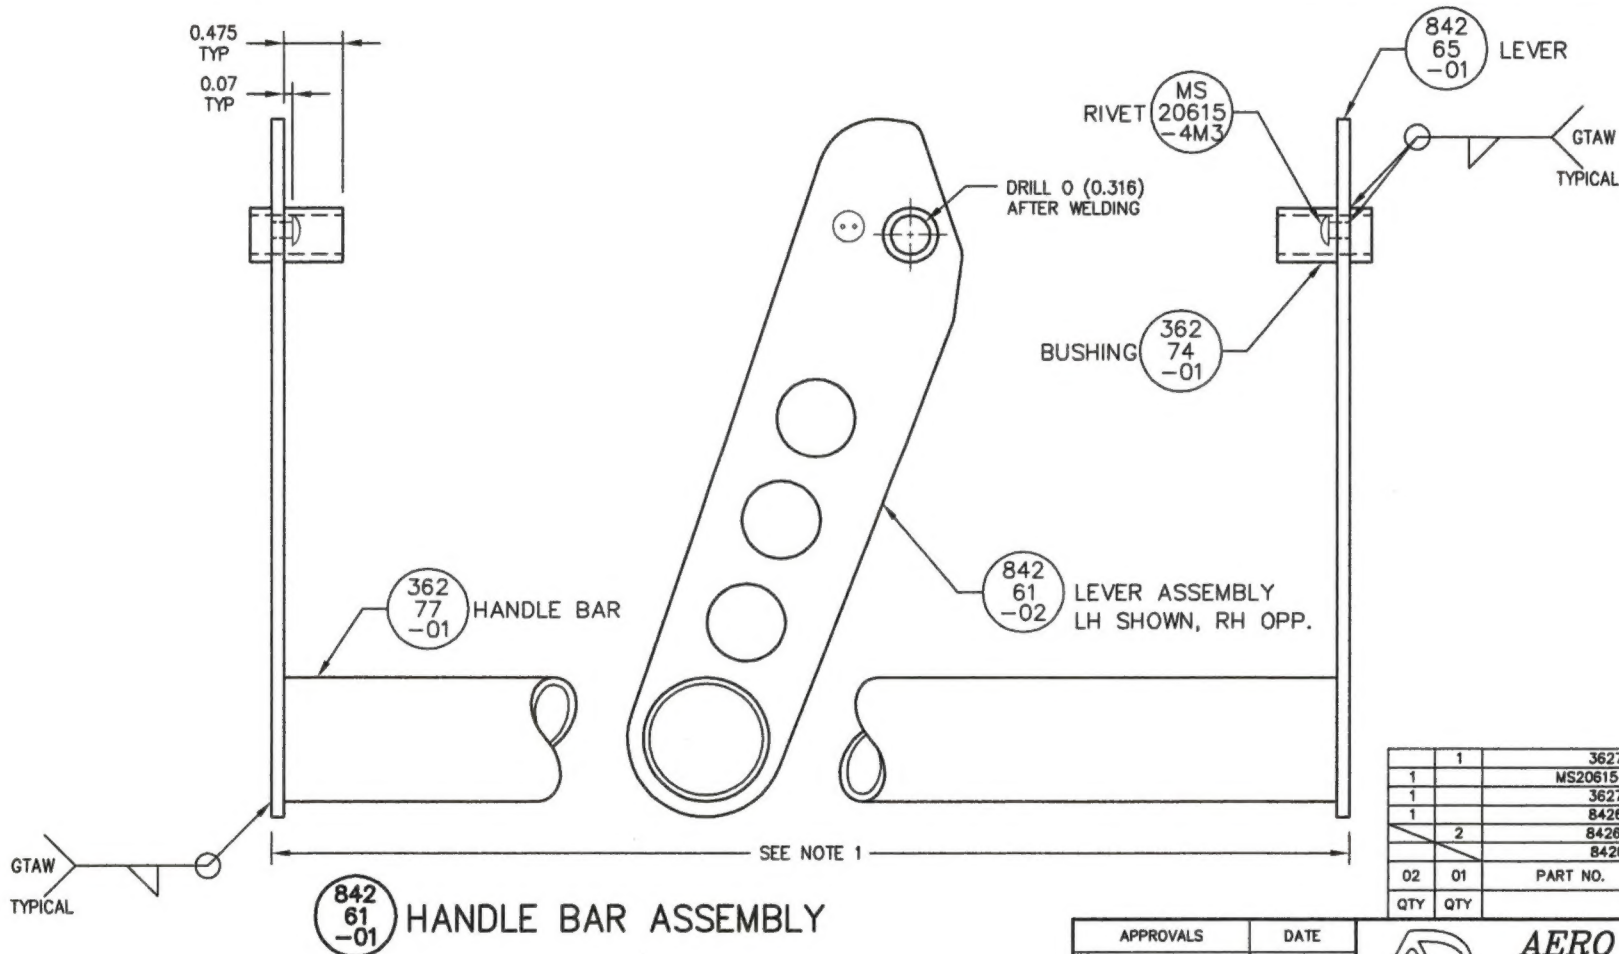

NOTES:

1. LENGTH OF HANDLE TO BE DETERMINED BY BASKET ASSEMBLY DRAWING.
2. REMOVE ALL BURRS AND SHARP EDGES.
3. WELDING TO BE COMPLETED BY GTAW METHOD TO AMS2685C USING ER308L ROD.

QTY	QTY	PART NO.	DESCRIPTION
1	1	36277-01	HANDLE BAR
1		MS20615-4M3	RIVET (MONEL)
1		36274-01	BUSHING
1		84265-01	LEVER
2		84261-02	LEVER ASSEMBLY (RH/LH)
		84261-01	HANDLE BAR ASSY

APPROVALS	DATE
DRAWN: R. RATHWELL	JUNE 18/09
CHECKED: E. BURGAIN	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ±0.010 ±1/2°
X.XX ±0.03
X.X ±0.1



AERO DESIGN LTD.

9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.463.2576 www.aerodesign.ca

**HELICOPTER CARGO BASKET
HANDLE BAR ASSEMBLY**



SCALE	DWG. SIZE	DWG. NO.	REV.
SCALE 1 : 1 SHEET 1 OF 1	A3	84261	2

NOTES:

1. THIS DRAWING IS AN ALTERNATE CONFIGURATION FOR THE HANDLE INSTALLATION SHOWN ON DRAWING 36255.
2. GREASE BUSHING (ITEM 04) USING MOBILGREASE 28 OR EQUIVALENT PRIOR TO INSTALLATION.

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE - CREATED FROM 36255	BJC	NOV 03/09
1	HANDLE END BRACKETS FLIPPED	BJC	SEPT 19/11
2	TITLE BLOCK UPDATED; ADD NOTE 2; HARDWARE UPDATED	BJC	MAR 13/14

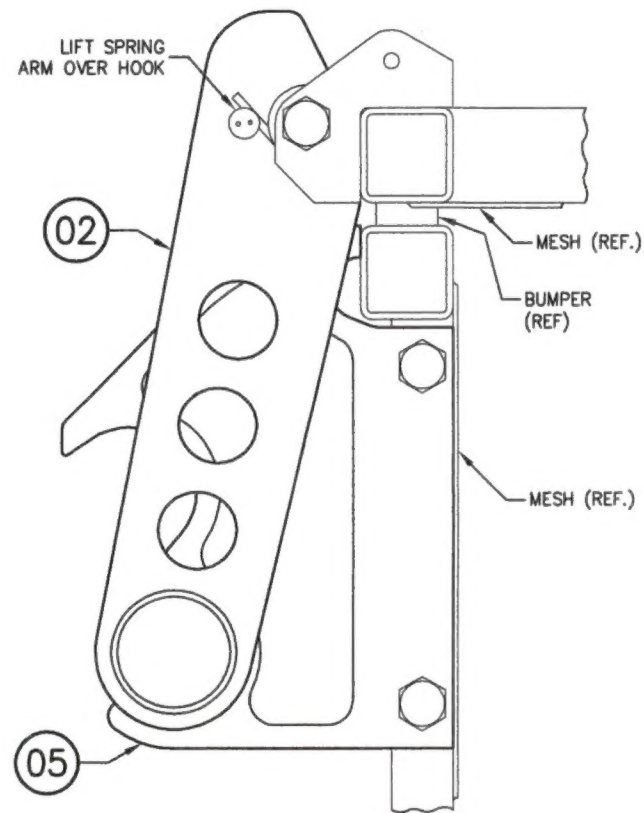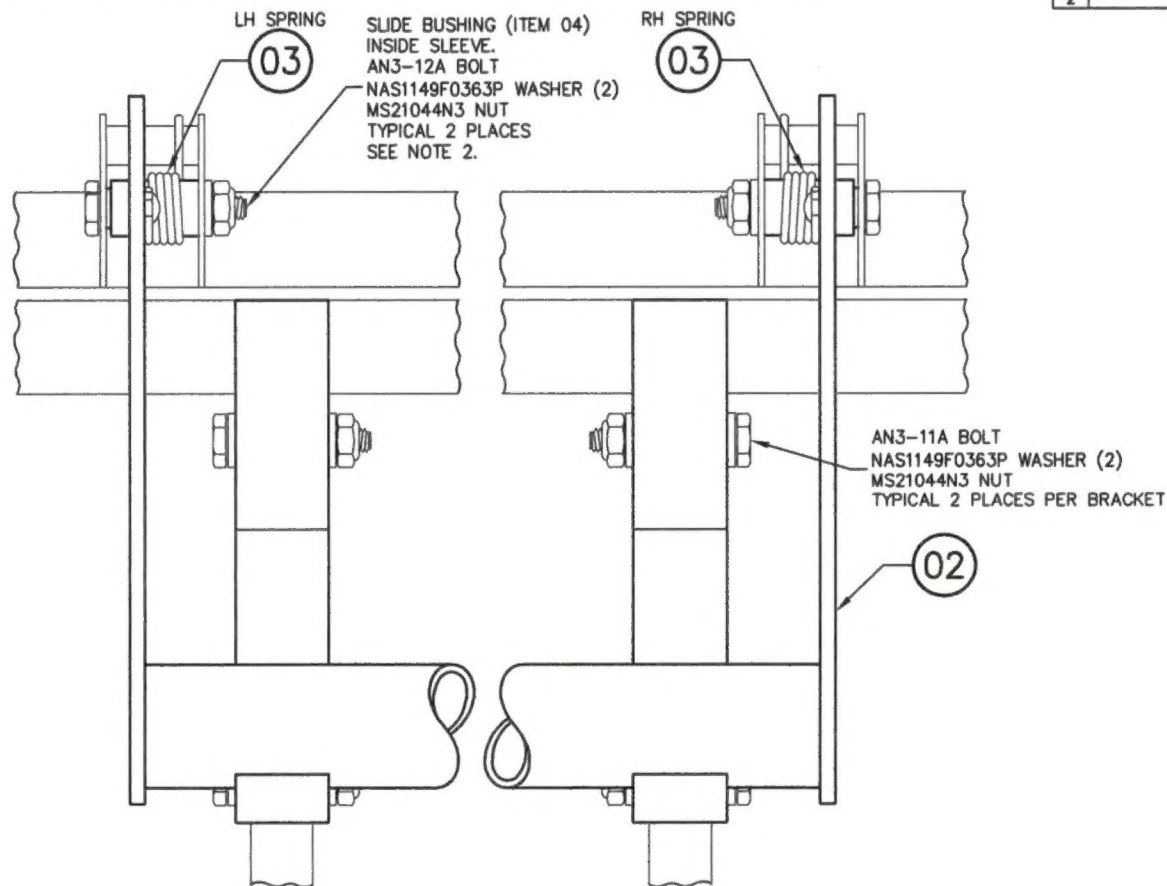

01 HANDLE INSTALLATION

A/R	MOBILGREASE 28		GREASE	MIL-PRF-81322F
4	AN3-11A		BOLT	
2	AN3-12A		BOLT	
10	NAS1149F0363P		WASHER	
6	MS21044N3		NUT	
2	84267-01	05	BRACKET	
2	36275-01	04	BUSHING	
2	36278-01	03	SPRING (1 LH, 1 RH)	
1	84261-01	02	HANDLE BAR ASSEMBLY	
	84255-01	01	HANDLE INSTALLATION	
01	PART NO.	ITEM	DESCRIPTION	MATERIAL
QTY.	LIST OF MATERIALS			

APPROVALS	DATE
DRAWN: JEFF CLARKE	03 NOV 2009
CHECKED: E. BURGOIN	

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES.
TOLERANCES ON:
DECIMALS ANGLES
X.XXX ± 0.010 $\pm 1/2^\circ$
X.XX ± 0.03
X.X ± 0.1



AERO DESIGN LTD.


9888A MALASPINA ROAD
POWELL RIVER, BC, CANADA, V8A 0G3
TEL: 604.483.2376 www.aerodesign.ca

**HELICOPTER CARGO BASKET
HANDLE BAR INSTALLATION**

SCALE 1 : 1	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A3	84255	2

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREON.

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE	*	*

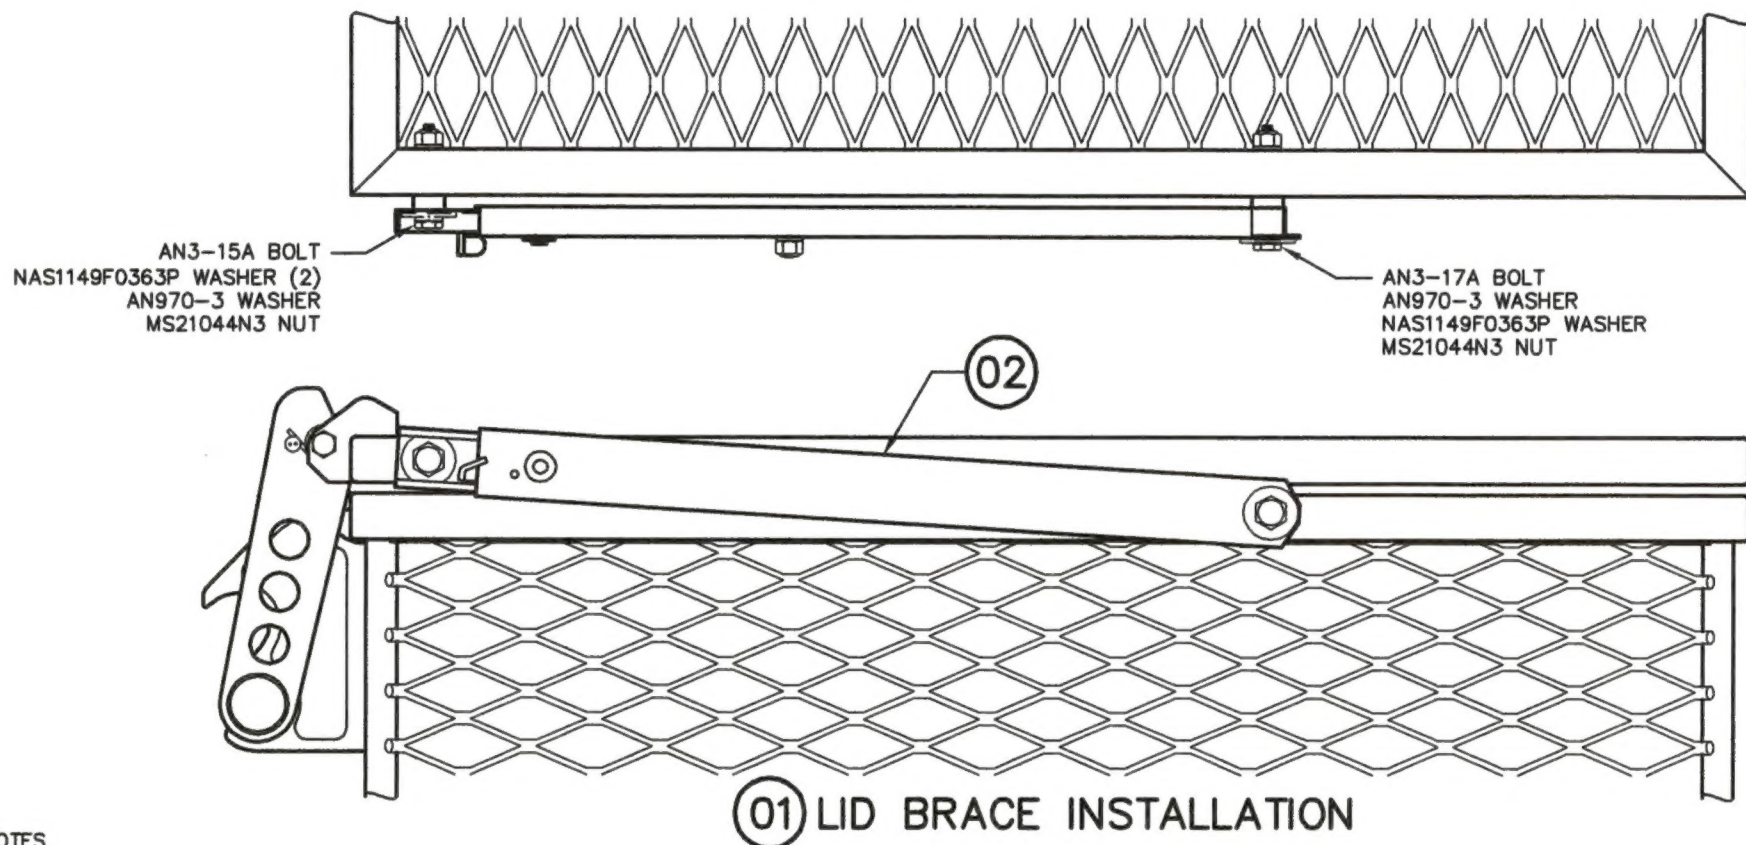


NOTES

1. THIS DRAWING APPLIES TO ALL AERO DESIGN LTD. CARGO BASKET ASSEMBLIES.
LID PROP IS TO BE INSTALLED ON THE FORWARD END OF THE BASKET AS INSTALLED ON THE HELICOPTER.

2	MS21044N3		NUT
3	NAS1149F0363P		WASHER
2	AN970-3		WASHER
1	AN3-17A		BOLT
1	AN3-15A		BOLT
1	36280-01	02	LID BRACE ASSEMBLY
	84240-01	01	LID BRACE INSTALLATION
01	PART NO.	ITEM	DESCRIPTION
QTY.	LIST OF MATERIALS		

APPROVALS	DATE
DRAWN: JEFF CLARKE	21 MAY 2014
CHECKED: JASON REKVE	21 MAY 2014
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ± 0.010 $\pm 1/2^\circ$ X.XX ± 0.03 X.X ± 0.1	

 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604.483.2376 www.aerodesign.ca		HELICOPTER CARGO BASKET ALL MODELS LID BRACE INSTALLATION	
NOT TO SCALE	DWG. SIZE	DWG. NO.	REV.
SHEET 1 OF 1	A4	84240	0

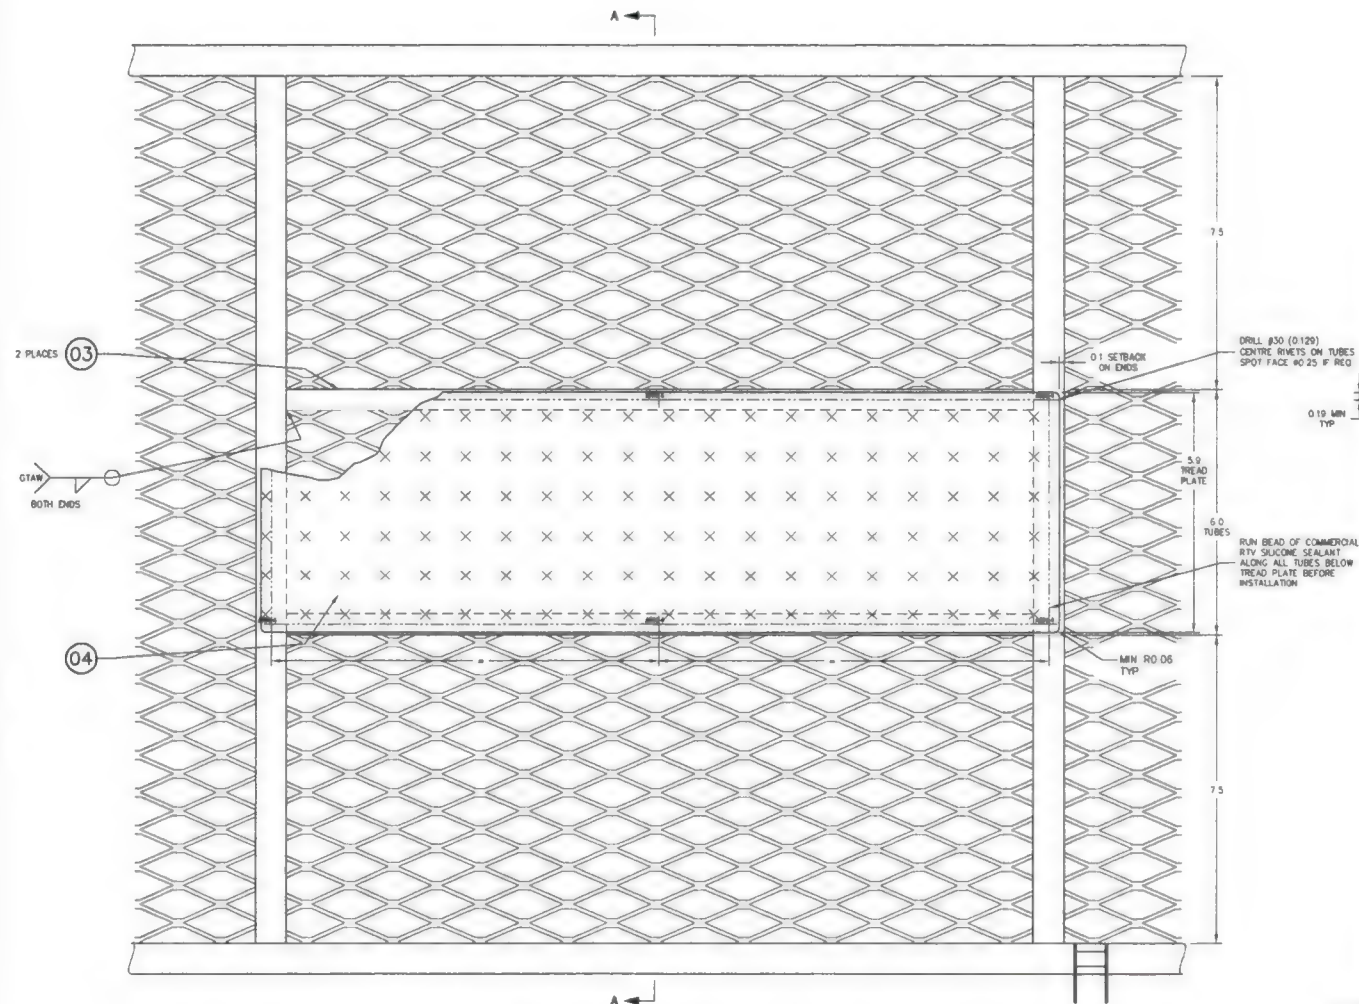

01 BASKET LID ASSEMBLY

SECTION A-A

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THE DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING OR ABOUT THE WRITER CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR EXISTENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.

REV	DESCRIPTION OF CHANGE	INITIALS	DATE
1	ADD BELL MEDIUM AND EUROCOPTER AS330 BASKETS, CHANGE TUBES	BJC	MAR 19/08
2	ADD EUROCOPTER EC135 MCDONNELL DOUGLAS MD800N, BELL 206B BASKETS	BJC	DEC 4/08
3	ADD NEW AS330 AND 206L/407 MODELS	BJC	DEC 4/08
4	TITLE BLOCK UPDATED, MODEL LIST REMOVED, ADD ALT RIVET, ADD NOTE 7	BJC	28/05/2014

NOTES:

1. THIS DRAWING IS AN OPTIONAL CONFIGURATION ADDING A TREAD PLATE STEP TO THE LID. THIS CONFIGURATION MAY BE APPLIED TO ANY OR ALL BAYS OF THE LID. REMAINDER OF LID ASSEMBLY IS TO BE FABRICATED IN ACCORDANCE WITH THE APPLICABLE DRAWINGS.
2. TUBES (ITEM 03) MUST BE WELDED IN PLACE BEFORE MESH IS WELDED ON BOTTOM.
3. REMOVE ALL BURRS AND BREAK SHARP EDGES.
4. WELDING OF 4130 STEEL TO BE COMPLETED BY GTAW METHOD TO AMS 2885C. WELDING ROD SHALL CONFORM TO ER70S-2 OR EQUIVALENT.
5. WHEN ASSEMBLY IS COMPLETE, FILL ALL VENT HOLES WITH ROSETTE WELD.
6. THOROUGHLY CLEAN AND POWDER COAT BASKET SUB-ASSEMBLIES PRIOR TO ASSEMBLY. INSTALL TREAD PLATE AFTER POWDER COATING.
7. WIDTH AND POSITION OF LID STEP MAY BE ADJUSTED TO MATCH LID DOOR INSTALLED IN ACCORDANCE WITH DRAWING 70402 ON ADJOINING BAY OF THE LID.

A/R	CR3213-4-02	BLIND RIVET	ALTERNATE HR3213-4-02
1	70405-04 04 TREAD PLATE	ALUMINUM	COMMERCIAL
2	70405-03 03 TUBE	4130 STEEL COND N	MIL-T-6736
1	SEE NOTE 1 02 BASKET LID ASSEMBLY		0.5 X 0.035 WALL TUBE
1	70405-01 01 BASKET LID ASSEMBLY - MODIFIED WITH STEP		
01	PART NO	ITEM	DESCRIPTION
		MATERIAL	MATERIAL SPEC
			STOCK SIZE
QTY			LIST OF MATERIALS

BASIC CODE REF HAS 523 C=COUNTERSUNK D=DIMPLE DIGIT# OF SHEETS TO BE DIMPLED BASIC CODES BJ=MS20470AD BB=MS20426AD ARW=CR3213 ARW=CR3212		DASH NO. FOR DIAMETER N=MFD. HEAD NEAR SIDE F=MFD. HEAD FAR SIDE DASH NO. FOR LENGTH + INSTALL NEW RIVET + REMOVE/REPLACE RIVET - EXISTING RIVET		APPROVALS DRAWN: JEFF CLARKE 21 SEPT 2008 CHECKED: E BURCOON UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ON: DECIMALS ANGLES X XXX ±0.010 ±1/2° X XX ±0.03 X X ±0.1		AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604 482-3376 www.aerodesign.ca	
CARGO BASKET LID STEP MODIFICATION				SCALE 1:15 SHEET 1 OF 1		DWG SIZE A1	
				DWG NO. 70405		REV. 4	

REV.	DESCRIPTION OF CHANGE	INITIALS	DATE
0	INITIAL ISSUE		
1	UPDATE TITLE BLOCK; UPDATE ADDRESS AND LOGO; MAT'L THICKNESS CHANGED	BJC	10/07/2014

NOTES


- ENGRAVE 0.007 DEEP AS FOLLOWS:
 "QUICK RELEASE BASKET" - 0.125 HIGH
 "EUROCOPTER AS350 & AS355 SERIES" - 0.080 HIGH
 "S/N 94001-XX" - 0.080 HIGH
 "MAXIMUM PERMISSIBLE LOAD" - 0.125 HIGH
 "300 LBS/136 KG" - 0.200 HIGH
 "AERO DESIGN LTD." - 0.125 HIGH
 "POWELL RIVER, BC, CANADA" - 0.080 HIGH
 "www.aerodesign.ca" - 0.080 HIGH

DRILL #30 (0.129)
4 PLACES



01 PLACARD

94027-01	01	PLACARD	6061-T6 ALUMINUM	QQ-A-250/11	0.050 SHEET
PART NO.	ITEM	DESCRIPTION	MATERIAL	MATERIAL SPEC	STOCK SIZE
LIST OF MATERIALS					

THIS DRAWING CONTAINS INFORMATION AND DATA WHICH IS PROPRIETARY TO AERO DESIGN LTD. THIS DRAWING, OR ANY PORTION THEREOF, MAY NOT BE REPRODUCED, COPIED, OR DUPLICATED IN ANY MANNER, NOR USED FOR MANUFACTURING WITHOUT THE WRITTEN CONSENT OF AERO DESIGN LTD. BY ACCEPTING THIS DRAWING FOR REFERENCE, THE RECIPIENT AGREES TO HOLD AERO DESIGN LTD. HARMLESS FROM THE USE, OR MISUSE, OF THIS DRAWING OR THE INFORMATION CONTAINED THEREIN.	APPROVALS	DATE	 AERO DESIGN LTD. 9888A MALASPINA ROAD POWELL RIVER, BC, CANADA, V8A 0G3 TEL: 604.483.2378 www.aerodesign.ca		
	DRAWN: R. RATHWELL	OCT 3, 2011			
	CHECKED: E. BURGON				
	UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ON: DECIMALS ANGLES X.XXX ±0.010 ±1/2° X.XX ±0.03 X.X ±0.1		EUROCOPTER AS350 & AS355 SERIES QUICK RELEASE CARGO BASKET PLACARD		
	SCALE 1 : 1 SHEET 1 OF 1		DWG. SIZE A4	DWG. NO. 94027	REV. 1

▼ CARGO BASKET ASSEMBLY - COMMON

Work Order: 2014-214

Date Open: 15 Dec. 2017

General

These instructions apply to all cargo basket assemblies. Refer to the following drawings, at the current revision, for dimensions and details. Drawings are linked to the source for ease of printing.

		Basket			Lid	Lid	Handle		
✓	Basket Type	Ass'y	Placard	Mat'l	Walk	Prop	Inst'n	Ass'y	Mat'l
Bell 206B – right side only									
	Short	80210	80227	Mat'l	70405	84240	84255	84261	Mat'l
	Medium	80310	80327	Mat'l					Mat'l
	Long	81110	81127	Mat'l					Mat'l
Bell 206L/407 – Right side only									
	Low Standard	69810	69827	Mat'l	70405	84240	84255	84261	Mat'l
	Low Wide	94510	94527	Mat'l					Mat'l
	Low Ski	94610	94627	Mat'l					Mat'l
	High Ski	76610	76625	Mat'l					Mat'l
Bell Medium – left or right									
	Standard	75110	75127	Mat'l	70405	84240	84255	84261	Mat'l
	Extra Large (ski)	95510	95527	Mat'l					Mat'l
	Mega	100610	100627	Mat'l					Mat'l
Bell 429 – right or left									
	Standard – Pre S/N 71	95910	95927	Mat'l	70405	84240	84255	84261	Mat'l
	Standard – Post S/N 71	95950	95927	Mat'l					Mat'l
Eurocopter AS350/AS355 – left or right									
	Short	77610	77627	Mat'l	70405	84240	84255	84261	Mat'l
	Medium	76410	76427	Mat'l					Mat'l
	Long	78410	78427	Mat'l					Mat'l
✓	Ski	94010	94027	Mat'l					Mat'l
Robinson R44 – left or right									
	Standard	90610	90627	Mat'l	70405	84240	84255	84261	Mat'l
MD600									
	Standard	82810	82827	Mat'l	70405	84240	84255	84261	Mat'l

Hyperlinking to specific excel sheet –

1. on desired excel sheet cell A1, set name of cell, eg. Assembly.
2. at end of hyperlink add #Assembly (filename.xls#Assembly).

CB *off*

1. Lid Assembly

a. Install lid bumpers on bottom.

- i. Drill $\frac{1}{4}$ " holes using center drill, 3 (standard/medium) or 4 (long/ski) places.
- ii. Fill bumper holes with RTV silicone sealant.
- iii. Insert 49205-14 lid bumper, 3 or 4 places per lid.

b. Install placard on bracket on top of lid

Note: 959 and 1006 placard is installed on body.

- i. Locate placard on bracket.
- ii. Drill #30 through placard and bracket, using holes in placard.
- iii. Remove placard and de-burr holes in placard and on bracket.
- iv. Locate placard on bracket, and cleco in place.
- v. Rivet placard with four CR3213-4-02 CherryMax rivets.

c. Option: Install walkway on top of lid (lid must be fitted with walkway provisions)

- i. Note: avoid touching surface of tread plate with bare hands to prevent smudges or marks on the top surface.
- ii. Pull tread plate from stock. Shear tread plate to length.
- iii. De-burr edges of tread plate with scotch-brite wheel on bench grinder.
- iv. Locate tread plate on lid. Hold tread plate in place with bags of lead shot.
- v. Mark and drill #30 holes:
 1. 0.25" from edge of tread plate, centre on cross members (0.38")
 2. 0.25" from edge of tread plate, middle of each walkway stringer
- vi. De-burr and counter-bore (if required to provide clearance of rivet head on checker pattern) all holes in tread plate using $\frac{1}{4}$ " piloted counter bore on both sides.
- vii. De-burr holes in lid tubes.
- viii. Apply bead of RTV silicone sealant along all tubes under tread plate.
- ix. Set tread plate in place, secure with clecos if necessary.
- x. Rivet placard with CR3213-4-02 CherryMax rivets

d. Record PO/WO of all parts (including lid) used in steps above on attached material tracking list.

2. Body Assembly

a. Install attachment fittings

- i. Carefully remove excess powder coat from around attachment lug threads using a countersink.
- ii. Run 3/8-24 tap into attachment lugs to clear threads.
- iii. Apply anti-seize compound to attachment fittings 96710-01 (alternate: Ancra 40088-14)
- iv. Install attachment fittings with two NAS1149F0363P washers in four lugs in basket.
 1. 90610 (Robinson R44) basket only:
 - a. Install 1 fitting 90628-01 in lower forward attachment lug only.
 - b. Install 3 96710-01 fittings in remaining locations.
- v. Torque to 160-190 in-lbs (13.3-15.8 ft-lbs).

CB *off*

- b. 959 and 1006 Baskets only: Install inboard sheet on upper rim of basket
 - i. Locate sheet on basket.
 - ii. Drill #30 through sheet and rim, located as specified on drawing. Cleco in place.
 - iii. Remove sheet and de-burr holes in sheet and rim.
 - iv. Apply bead of RTV silicone sealant along all tubes under sheet.
 - v. Locate sheet on basket, and cleco in place.
 - vi. Rivet sheet with CR3213-4-02 CherryMax rivets.
- c. 959 Basket only: Install forward sheet
 - i. Locate sheet on basket. Ensure sufficient clamps are in place.
 - ii. Drill #30 through sheet, rim and hoop, located as specified on drawing. Cleco in place.
 - iii. Remove sheet and de-burr holes in sheet and rim.
 - iv. Apply bead of Pro-Seal sealant along all tubes under sheet.
 - v. Locate sheet on basket, and cleco in place.
 - vi. Rivet sheet with CR3213-4-02 CherryMax rivets.
- d. Record PO/WO of all parts (including basket) used in steps above on attached material tracking list.

CB 

3. Hinge Installation

- a. Prepare hinge.
 - i. Cut hinge to length:
 - 1. 776, 906 – 54"
 - 2. 751, 803 – 70"
 - 3. 698, 764, 945 – 72"
 - 4. 766, 784 – 90"
 - 5. 940, 946, 959 – 95"
 - 6. 1006 – 107"
 - ii. Drill #30 pilot holes using hinge jig. For long hinges, flip at specified location on jig.
- b. Install hinge on basket
 - i. Locate hinge on basket (standard baskets)
 - 1. centre fore/aft
 - 2. 0.15" – 0.18" up from bottom edge
 - ii. Locate hinge on basket (extra wide baskets)
 - 1. centre fore/aft
 - 2. set hinge at 90 degrees (as if lid would be installed) using a small square, locate vertical side at 22.5" from outboard edge.
 - iii. Drill #30 through holes in hinge into basket rim. Cleco in place with 1/8 (copper) clecos.
 - iv. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 (black) clecos.
 - v. Remove hinge and de-burr holes in hinge and basket rim.
 - vi. Cleco hinge to basket with 5/32 clecos.
 - vii. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations

- c. Install lid on basket
 - i. Locate lid on hinge (all baskets)
 - 1. center fore/aft
 - 2. 0.15" – 0.18" down from top edge
 - ii. Drill #30 through holes in hinge into lid rim. Cleco in place with 1/8 clecos.
 - iii. Drill holes up to #21 through hinge and rim. Replace 1/8 clecos with 5/32 clecos.
 - iv. Remove hinge and de-burr holes in hinge and lid rim.
 - v. Cleco lid to hinge with 5/32 clecos.
 - vi. Install hinge with CherryMax rivets
 - 1. CR3523-5-02 monel rivets – last 2 rivets in each end
 - 2. CR3213-5-02 aluminum rivets – all other locations
- d. Record PO of hinge and rivets on attached material tracking list.

CDN

4. Install Handle

- a. Install handle brackets.
 - i. Set 84267-01 handle bracket on provisions in hoops, 2 places.
 - ii. Install AN3-11A bolt, NAS1149F0363P washer (2), MS21044N3 nut. Two places per bracket, two brackets per basket.
 - iii. Torque AN3 bolts to 20-25 in-lbs.
- b. Install handle
 - i. Trim 36278-01R and 36278-01L springs to ensure end of spring does not extend past edge of handle bracket, approximately 1/8". Set springs over bushing of 84261-01 handle assembly.
 - ii. Grease two 36275-01 bushings with Mobil Grease 28 or equivalent. Insert into bushings of handle assembly.
 - iii. Locate handle on basket lid. Insert AN3-12A bolt with NAS1149F0363P through bracket on lid and handle bushing on one end of handle.
 - iv. On other end of handle, hook spring over catch rivet on handle assembly and use spring tool to twist spring to catch arm on bracket on lid while inserting AN3-12A bolt with NAS1149F0363P washer through lid bracket and handle bushing.
 - v. At first end, remove bolt and repeat step iv.
 - vi. Install NAS1149F0363P washer and MS21044N3 nut on both AN3-12A bolts.
 - vii. Torque AN3 bolts to 20-25 in-lbs.
- c. Check handle
 - i. Operate handle to ensure handle does not bind and springs hold handle in.
 - ii. Snap handle into brackets to ensure handle locks.
- d. Record PO/WO of all parts used in steps above on attached material tracking list.

CB *OK*

5. Install lid brace

- a. Locate 36280-01 lid brace on bushing in basket. Ensure brace is on forward end of basket as it will be installed on the helicopter.
- b. On lid end, insert AN970-3 washer into end of lid brace. Insert AN3-15A bolt with NAS1149F0363P washer through AN970-3 washer, lid prop, and lid bushing. Install NAS1149F0363P washer and MS21044N3 nut on bolt.
- c. On basket end, insert AN3-17A bolt with AN970-3 washer through lid prop and basket bushing. Install NAS1149F0363P washer and MS2144N3 nut on bolt.
- d. Ensure brace is seated on lip of bushings before tightening nuts.
- e. Torque AN3 bolts to 20-25 in-lbs.
- f. Record PO/WO of all parts used in steps above on attached material tracking list.

N/A *OK*

6. 946 Basket Only: Install Cutout Brace

- a. Locate 94621-01 Brace over aft cross tube cutout.
- b. Install two AN4-6A bolts and two AN4-27A bolts with NAS1149F0463P washers.
- c. Torque AN4 bolts to 50-70 in-lbs.

7. Final Inspection

Dual inspection by a different person than assembled the basket.

- a. Check for general condition and correct assembly:
 - i. Bolts are tight
 - ii. Rivets are installed correctly
 - iii. Handle operates correctly
 - iv. Lid brace operates correctly
- b. Check that PO/WO numbers have been recorded.



Aero Design Ltd.

9888 A Malaspina Rd., Powell River, BC
V8A 0G3, 604-483-AERO (2376)

Quantity:	1	
PN:	Tread Plate	
Aircraft:	All	Model: N/A
Description:	Lid Walkway Checker Plate	
Supplier:	Ryerson	
Color:	Aluminum	
WO#:	N/A	PO# 17081

Work Order: 2014-214

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

1 of 2

Date Opened: 15 Dec. 2017

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
	<u>1</u>		94010-01	Cargo Basket Assembly		<u>S/N 94001-87</u>
Step 1				<i>Lid Assembly</i>		
	. 1		94012-01	Basket Lid Assembly		<u>2017-178-04</u>
Step 1.a.	.. 4		49205-14	Bumper	Argus Industries Bumper	<u>See PDS</u>
	.. A/R		--	Sealant	Commercial Silicone RTV sealant	<u>N/A</u>
Step 1.b.	.. 1		94027-01	Placard	0.063 Sheet, 6061-T6 Aluminum	<u>S/N 94001-87 CB 2015-03</u>
	.. 4		CR3213-4-02	Cherry Rivet		<u>17070</u>
Step 1.c.	. 1		70405-01	Lid Step Modification		
(option)	.. 1		70405-04	Tread Plate	3003 Aluminum Tread Plate, 0.063"	<u>17081</u>
	.. A/R		CR3213-4-02	Cherry Rivet		<u>17070</u>
	.. A/R		--	Sealant	Commercial Silicone RTV sealant	<u>N/A</u>
Step 2				<i>Basket Assembly</i>		
Step 2.a.	. 1		94011-01	Basket Body Assembly		<u>2017-178-06</u>
	.. 4		96710-01	Fitting	Alternate: Ancra 40088-14	<u>See PDS</u>
	.. 8		AN960-616	Washer		<u>See PDS</u>
Step 3				<i>Hinge Installation</i>		
	. 1		MS20001P4	Piano Hinge	95"	<u>17017</u>
	. 8		CR3523-5-02	Cherry Rivet		<u>15031</u>
	. A/R		CR3213-5-02	Cherry Rivet		<u>16053</u>
Step 4	. 1		84255-01	Handle Installation		
Step 4.a.	.. 2		84267-01	Bracket	Delrin, 3/4" Sheet	<u>2017-50</u>
	.. 4		AN3-11A	Bolt		<u>See PDS</u>
	.. 8		NAS1149F0363P	Washer		<u>See PDS</u>
	.. 4		MS21044N3	Nut		<u>See PDS</u>

Work Order: _____

Date Opened: _____

Material Tracking Sheet
Eurocopter AS350 / AS355
Extra Large Basket Assembly

2 of 2

Ass'y Step	Qty	Detail Drawing	Part Number	Description	Material	PO/WO
Step 4.b.	.. 1		84261-01	Handle Assembly		2017-194
	.. 2		36278-01	Spring (1 left, 1 right)	304 Stainless, 1/16" Dia Music Wire	See PDS
	.. 2		36275-01	Bushing	Brass, 5/16" Dia	See PDS
	.. 2		AN3-12A	Bolt		See PDS
	.. 4		NAS1149F0363P	Washer		See PDS
	.. 2		MS21044N3	Nut		See PDS
Step 5				Lid Brace Installation		
	. 1		36280-01	Brace Assembly		2017-170
	. 1		AN3-15A	Bolt		See PDS
	. 1		AN3-17A	Bolt		See PDS
	. 2		AN970-3	Washer		See PDS
	. 3		NAS1149F0363P	Washer		See PDS
	. 2		MS21044N3	Nut		See PDS
Step 6				Inspection	None	

Aero Design

Parts Distribution Sheet

Description: Basket Assembly Kit

WO# 2017-214

[illegible]